




Electrohome EAAC475 USB Port Replacement

We will be removing and replacing the USB port that allows for charging of various devices from the electrohome EAAC475.

Written By: Sterling Fulk

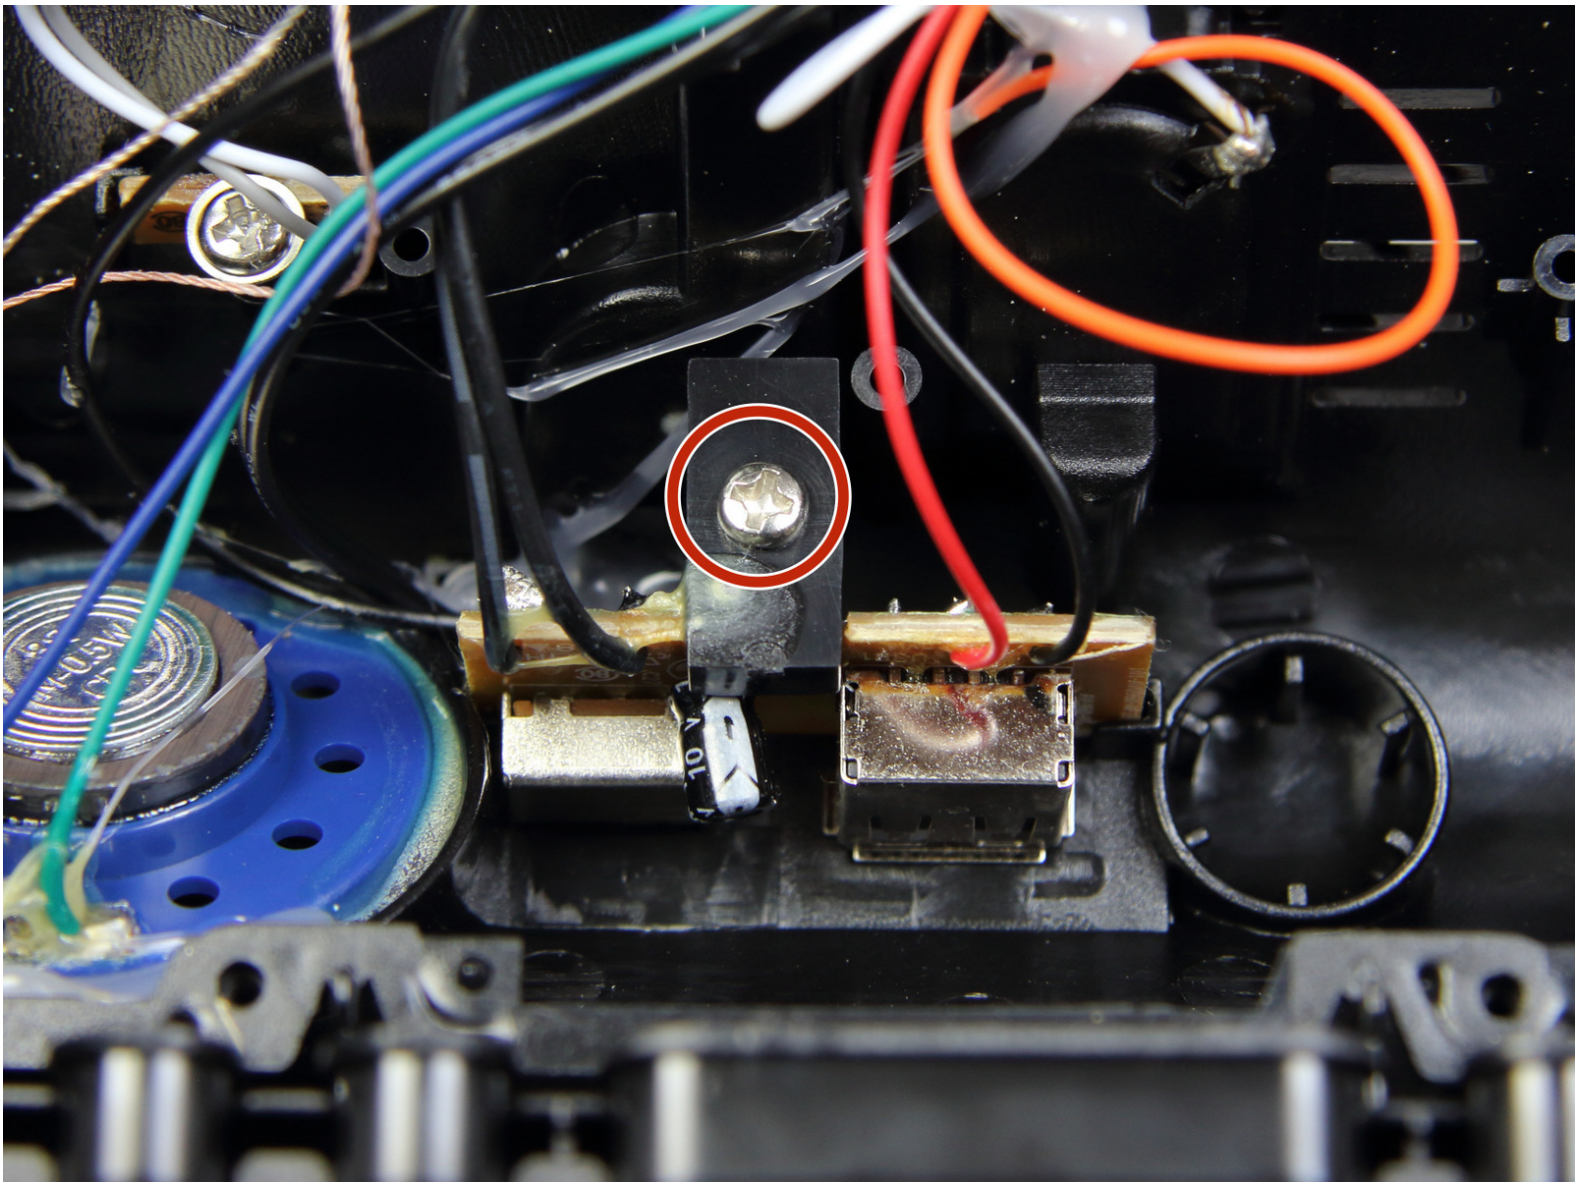

INTRODUCTION

Use this guide if your USB devices like smartphones are not charging from the port in your electrohome EAAC475. Also, you can use this guide to replace the port with the new one.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Soldering Workstation](#) (1)
-

Step 1 — Battery



- Remove the 10 mm Phillips #1 screw from the battery cover.
- Remove the battery cover.

Step 2

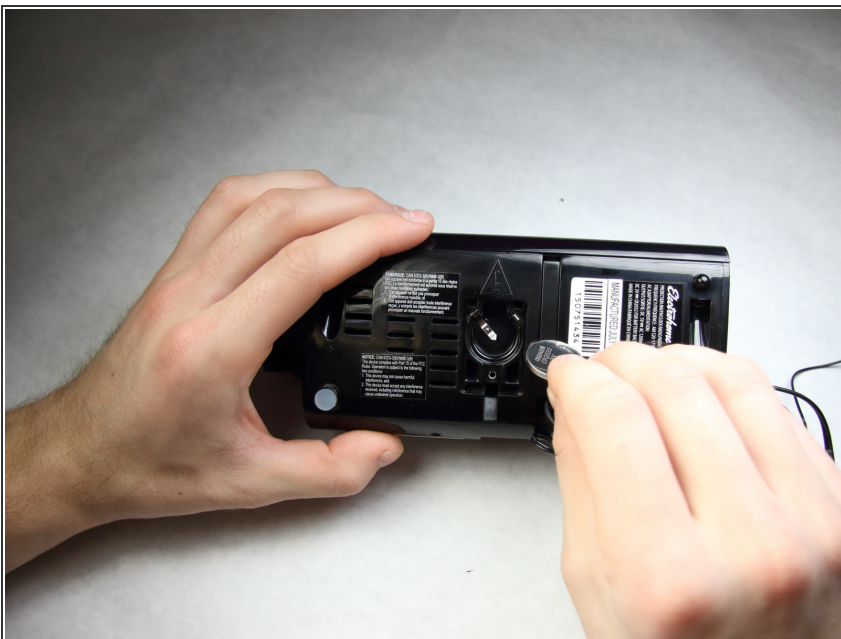

- Remove the flat lithium battery.


Step 3 — Buttons



 Disconnect the radio from all power sources.


- Remove the two 10 mm Phillips #1 screws from the bottom of the device.
- Remove two 10 mm Phillips #1 screws from the back side of the device.

Step 4

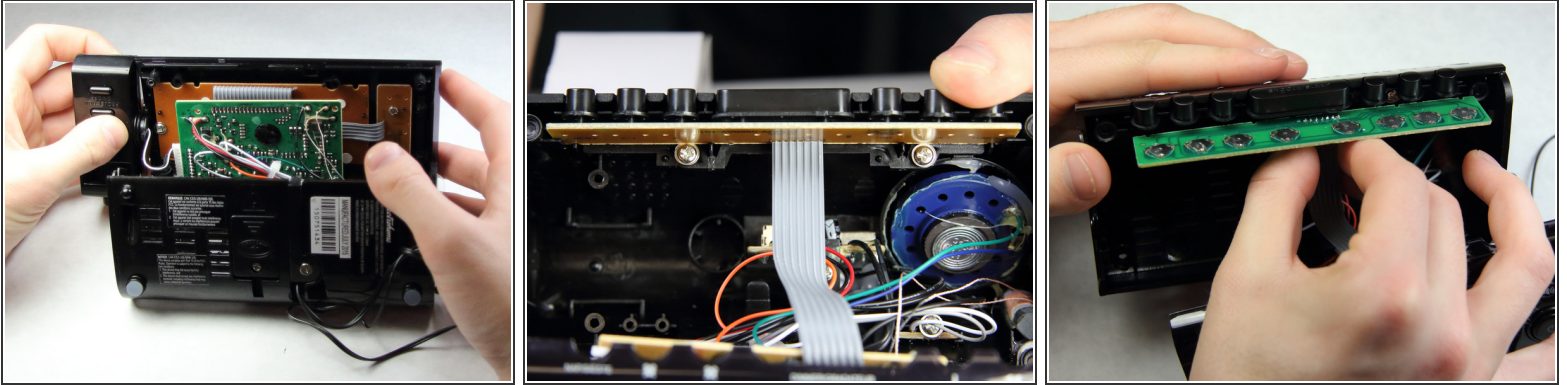


- Carefully and slowly pull the lower case away from the rest of the device.
- ⚠ Do not completely separate the lower case. There are several wires connecting the two halves of the device.
- Flip the device over to access the button assembly.
 - Slowly remove the button contact board from the assembly.

Step 5

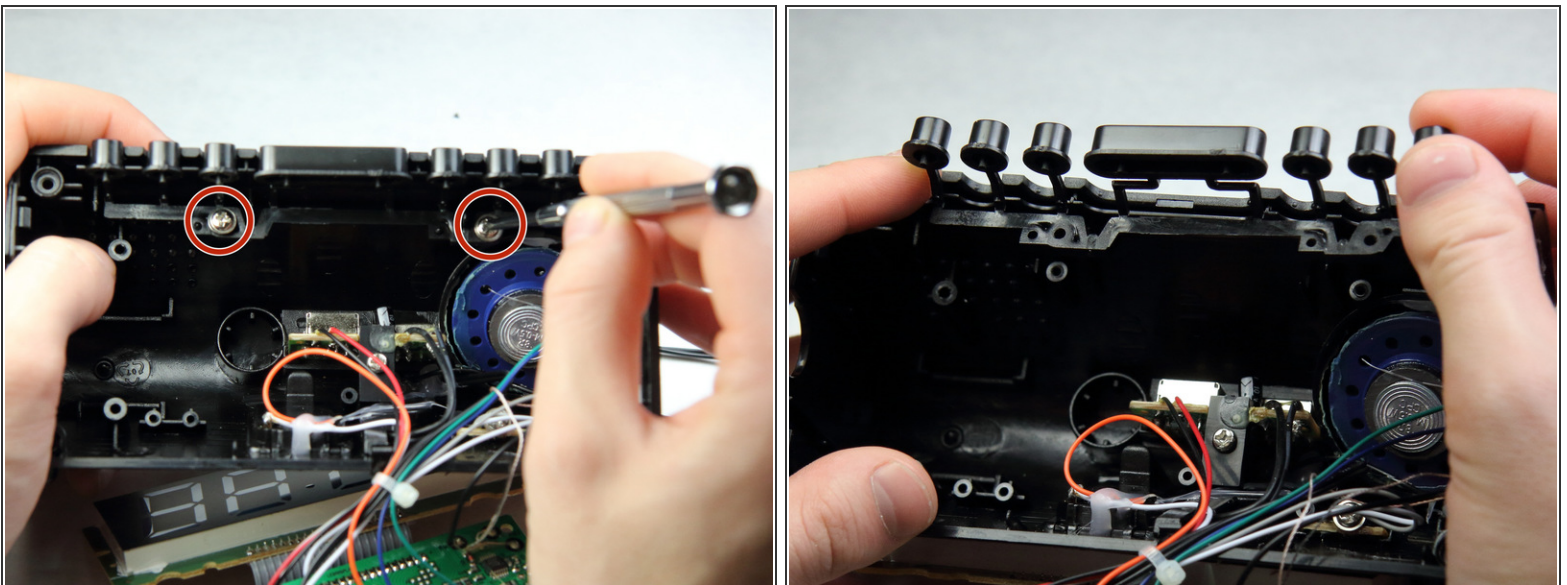


- Remove the two 7 mm Phillips # 1 screws holding the buttons.
- Remove the plastic buttons.

Step 6 — USB Port

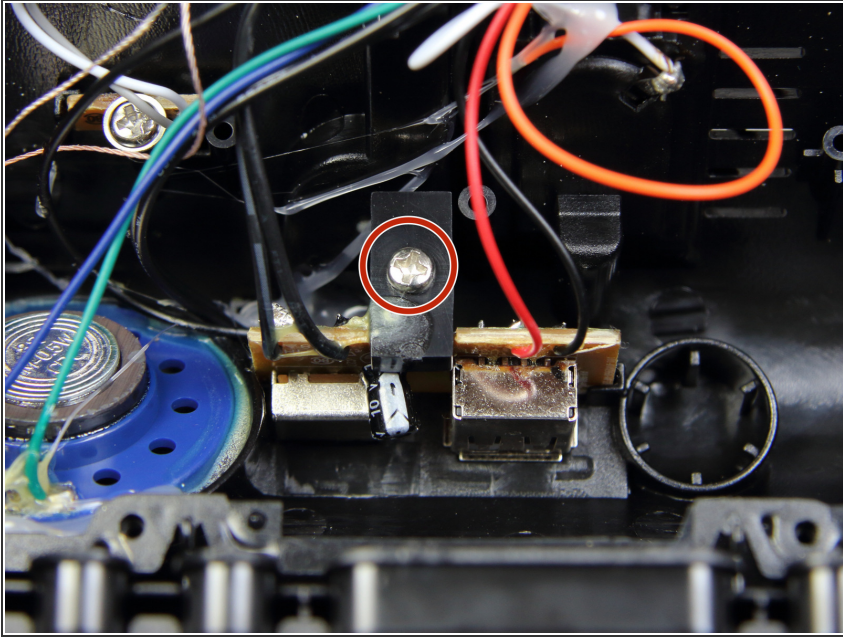


- Locate the screw holding the USB circuit board in place.
- Take a Philips head screwdriver and remove the 10 mm screw.

Step 7

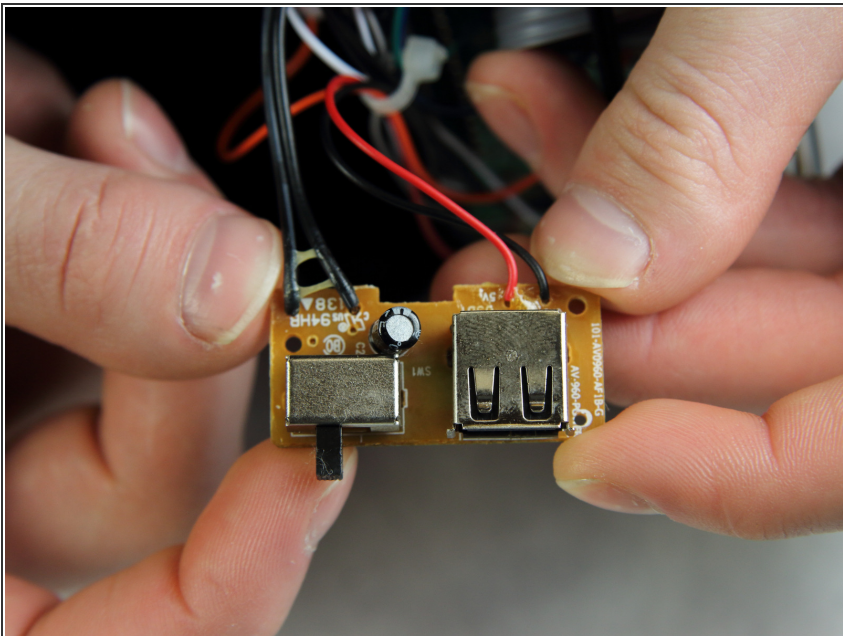

- Upon removing the screw, the circuit board should slide right out to look like this.
- ⓘ The USB port is to the right in this picture.

Step 8

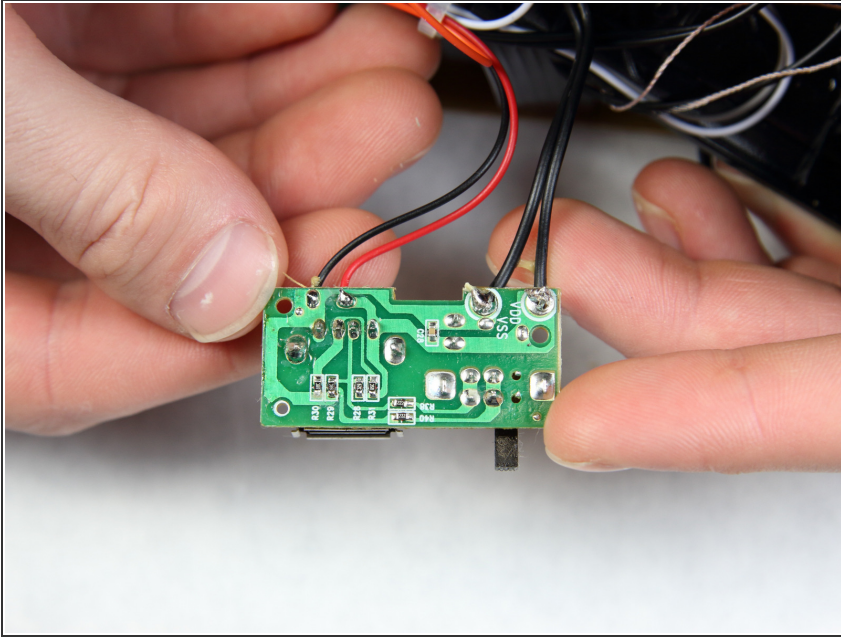

- Find the pins of the USB port that are soldered into the circuit board.
- Compare the new port with the old port to be sure which pins to work with.
- Take the soldering gun and heat up the pins one at a time.
 - ⚠ If you are not familiar with soldering, consult a more skilled individual or at least a how-to guide.
- Use solder wick with each pin to remove the solder.
- Remove the USB port.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 06:17:53 PM.